



Aufbau- und Pflegeanleitung für Ihren Skandika Campingstuhl

Aufbau

1. Entnehmen Sie den Campingstuhl aus seiner Tragetasche.
2. Halten Sie den Stuhl an den vier Standfüßen fest und falten Sie die vier Teleskopstangen der Sitzfläche um.

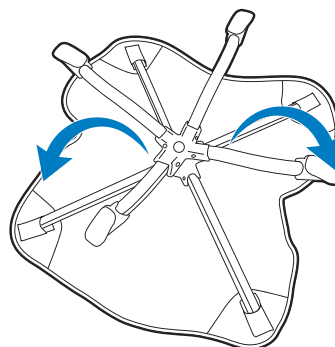

3. Ziehen Sie anschließend die Teleskopstangen auseinander, bis der Rahmen vollständig geöffnet ist und die Sitzfläche straff gespannt ist. Breiten Sie die vier Standfüße aus und drehen Sie den Stuhl um.

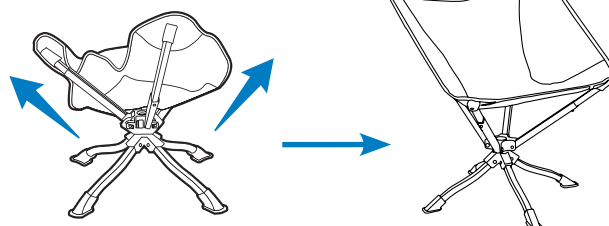

4. Überprüfen Sie, ob alle Gelenke des Rahmens eingerastet sind und der Stuhl stabil auf einem ebenen Untergrund steht.

Abbau

1. Schieben Sie die vier Teleskopstangen zusammen und falten Sie die Sitzfläche über die Standfüße.
2. Legen Sie den zusammengeklappten Stuhl zurück in die Tragetasche, um ihn einfach transportieren und platzsparend lagern zu können.


Wichtige Hinweise für eine lange Lebensdauer

- **Maximale Belastbarkeit:** Bitte überschreiten Sie nicht die auf dem Produktetikett angegebene maximale Gewichtskapazität, um die Stabilität und Sicherheit des Stuhls zu gewährleisten.
- **Sicherer Stand:** Platzieren Sie den Stuhl immer auf einem festen und ebenen Untergrund, um ein Umkippen zu verhindern.
- **Pflegehinweise:**
 - Reinigen Sie das Gewebe und den Rahmen mit einem feuchten Tuch und milder Seifenlauge.
 - Verwenden Sie keine scharfen oder scheuernden Reinigungsmittel, da diese das Material beschädigen könnten.
 - Lassen Sie den Stuhl nach der Reinigung oder bei Nässe vollständig an der Luft trocknen, bevor Sie ihn verpacken. So vermeiden Sie Schimmel und unangenehme Gerüche.
- **Lagerung:** Bewahren Sie den Stuhl an einem trockenen, vor direkter Sonneneinstrahlung geschützten Ort auf, wenn er nicht in Gebrauch ist.


Assembly and Care Instructions for Your Skandika Camping Chair

Assembly

1. Remove the camping chair from its carry bag.
2. Hold the chair by the four legs and fold out the four telescopic poles of the seat surface.

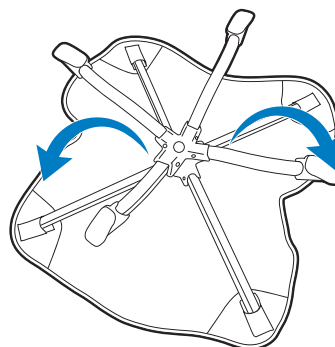

3. Then pull the telescopic poles apart until the frame is fully opened and the seat surface is tightly stretched. Spread out the four legs and turn the chair upright.

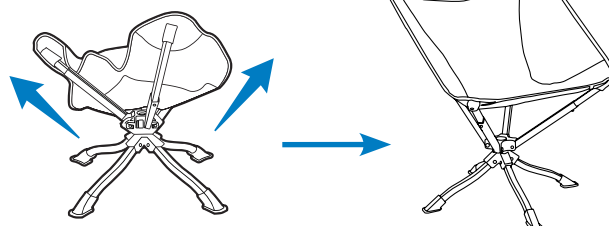

4. Check that all joints of the frame are locked in place and that the chair is stable on a flat surface.

Disassembly

1. Push the four telescopic poles together and fold the seat surface over the legs.
2. Put the folded chair back into the carry bag for easy transport and space-saving storage.

Important Notes for a Long Service Life

- **Maximum load:** Do not exceed the maximum weight capacity indicated on the product label to ensure the stability and safety of the chair.
- **Stable positioning:** Always place the chair on a firm and level surface to prevent it from tipping over.
- **Care instructions:**
 - Clean the fabric and frame with a damp cloth and mild soapy water.
 - Do not use harsh or abrasive cleaning agents, as they may damage the material.
 - Allow the chair to air dry completely after cleaning or if it has become wet before packing it away. This helps prevent mould and unpleasant odours.
- **Storage:** Store the chair in a dry place, protected from direct sunlight, when not in use.